


## INSTALLATION




1

MOUNT HEATER

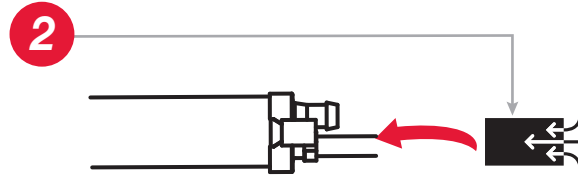

2

CONNECT AIR SOURCE TO HEATER

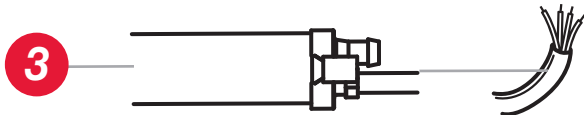


3

WIRE POWER, GROUND AND THERMOCOUPLE


For detailed instructions use the QR code below to download the product manual

## START-UP

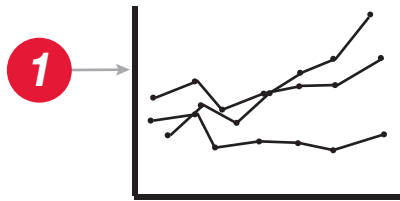


1

REFERENCE PERFORMANCE CURVES

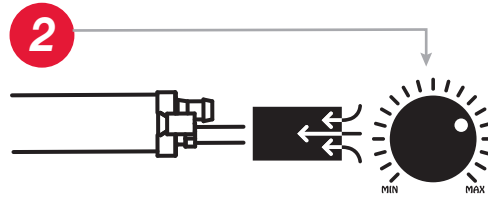


2

TURN ON AIR

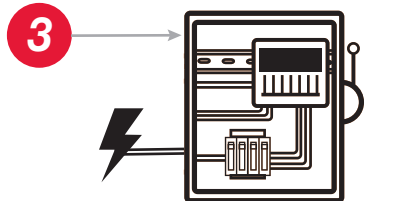

3


ENERGIZE MAIN POWER LINE

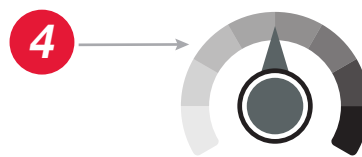

4


SET DESIRED TEMPERATURE

## SHUT-DOWN

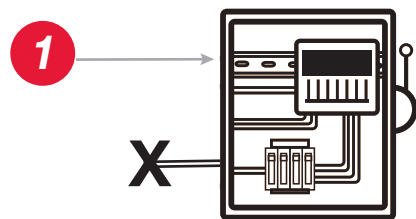


1

TURN OFF MAIN POWER

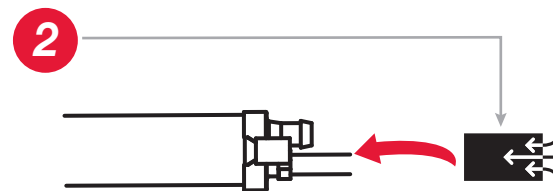

2

CONTINUE AIRFLOW TO THE HEATER

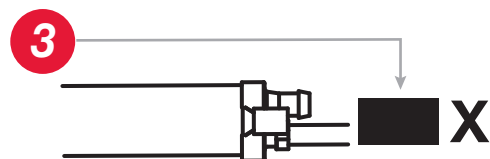

3

TURN OFF AIRFLOW TO HEATER

DOWNLOAD  
MANUAL

